

SUBJECT: 2011-2013 MY Instrumentation Warning and Indicator Lights

Department: Service
 Section: Service News Letter
 Model(s): All
 Model Year(s): 2011—2013
 Effective Date: July 2013
 Form #: SNL 071
 Rev #:
 Supersedes:

Purpose: To identify the Warning and Indicator lights displayed on the right and left hand side of the Multi-Display Monitor for 2011-2013 MY UD Trucks.

Warning and indicator lights

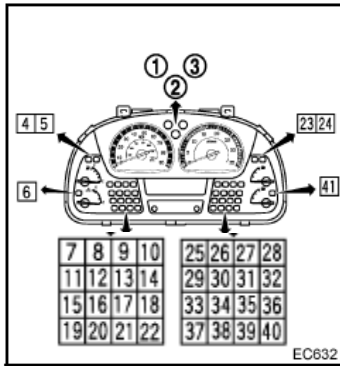


Figure 1

- 1) Warning and Indicator lights are located by the corresponding number location, as shown in figure 1.
- 2) An online copy of the Owner's Manual is located on the Service Operations Website under Publications / 2011-2013 Owner's Manual for full indicator descriptions and lamp color.

No	Tell mark	Name	Page
1		Left turn signal and hazard indicator light	7-51
2		HIGH beam indicator light	7-52
3		Right turn signal and hazard indicator light	7-51
4		Seat belt warning light	6-6
5		Spare	
6		Spare	
7		Spare	
8		Spare	
9		DEF low level warning light	7-10
10		Engine control warning light	7-43
11		Spare	
12		Spare	
13		DPF clogging warning light	3-21 7-70
14		Intake air heater indicator light	7-51
15		Spare	
16		Spare	
17		Exhaust gas high temperature indicator light	7-50
18		Spare	
19		Engine coolant level warning light	7-45
20		Tilt lock warning light	7-48
21		Cruise control "ON" indicator light	7-60
22		Cruise control "SET" indicator light	7-60
23	PARK	Parking brake warning light	7-47
24	BRAKE	Brake warning light	7-47
25	ABS	ABS warning light	7-44
26		Spare	
27		Exhaust brake indicator light	7-51
28		Spare	
29	SHIFT LIMIT	ATM shift limit warning light	7-49
30		ATM maintenance information light	7-50
31		Spare	
32		Spare	
33		Spare	
34		Spare	
35		Spare	
36		Spare	
37		Spare	
38		Spare	
39		Spare	
40		Spare	
41	BRAKE AIR	Air pressure warning light	7-43

The Information contained in this bulletin should not be interpreted as the basis for a warranty claim.